

TANNING
essentials®

SIMPLE TANNING SYSTEMS *built purposely for the perfect spray tan*

SPRAY STATION - TRAINING MANUAL

spray station



WELCOME

Thank you for choosing the Tanning Essentials Turbo Twister Spray Station. Please read the following to help assist you with the set up and maintenance of your spray station.

QUICK SET UP GUIDE

The Tanning Essentials Turbo Twister Spray Station contains:

3 Fan units	2 Additional rapid spray applicator cups with lids
1 Base unit	2 Connector cords
2 Side panels	1 Power cord
1 Floor	1 Foot pedal with 3 connected cords
2 Steel support bars	14 Screws
1 Hose	1 Cup holder
2 Rapid spray applicators	Set of base seals


OUR DETAILS

Contact Us


International	+61 3 9463 8900
United Kingdom	+44 (0) 2036 646 739
Email	sales@tanningessentials.co
facebook	/tanningessentials

You Tube Watch the full set up video now on [youtube/tanningessentials](https://www.youtube.com/tanningessentials)


FRONT OF SPRAY STATION

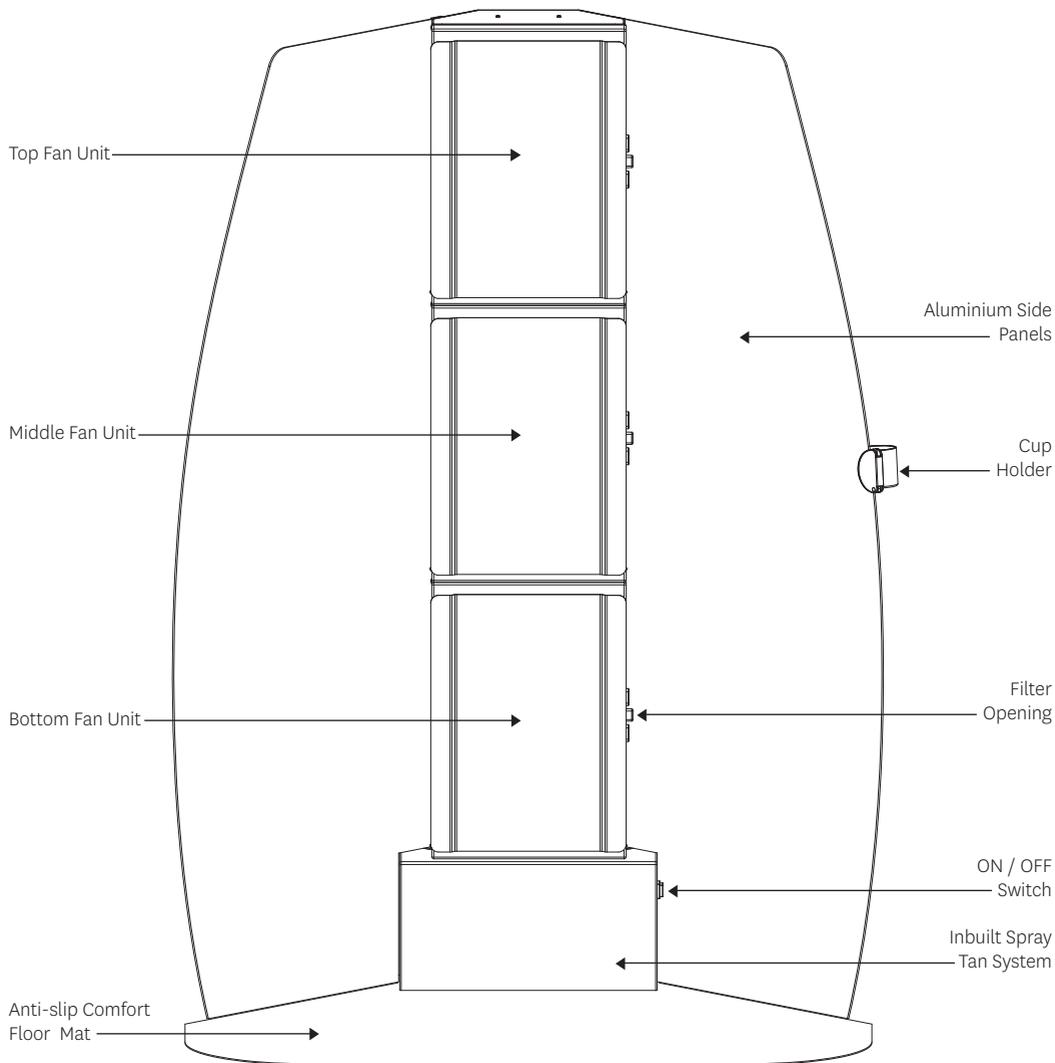


BACK OF SPRAY STATION

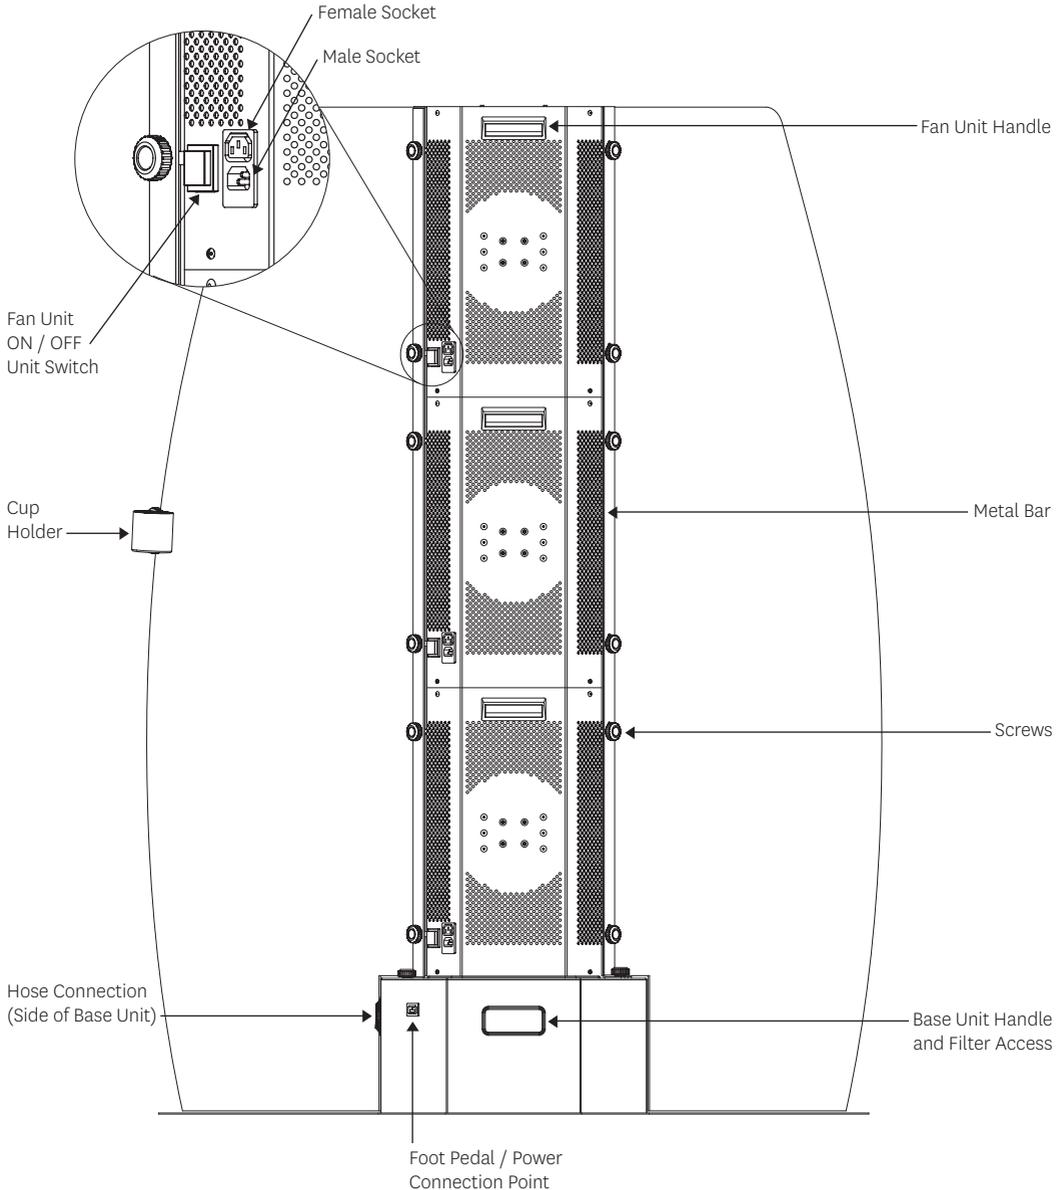

SPRAY STATION BASE

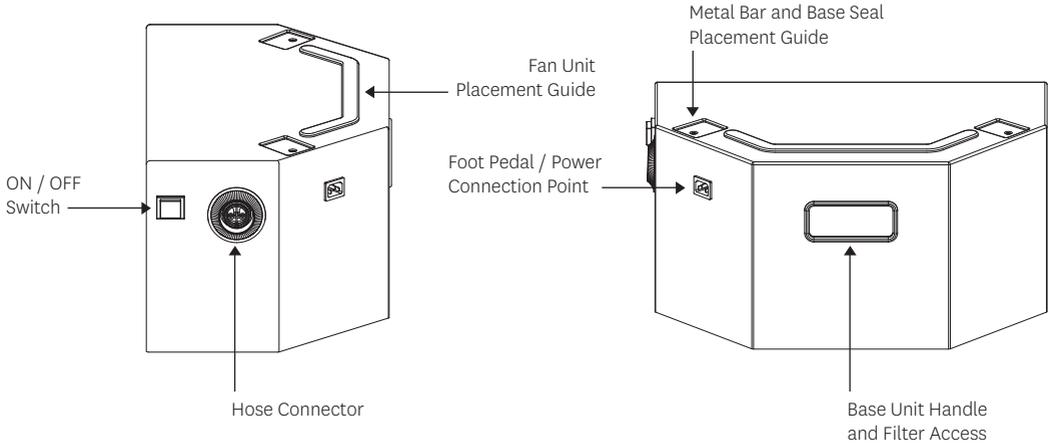

SPRAY APPLICATOR

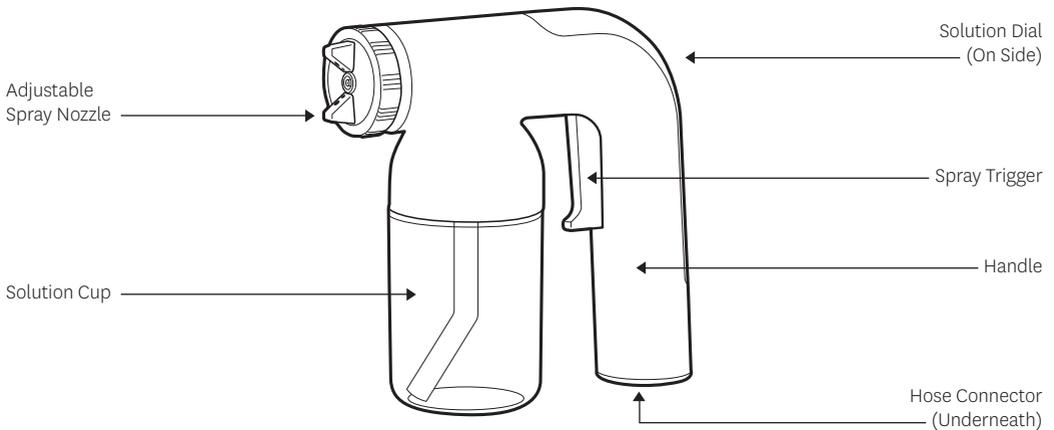

TOWER ASSEMBLY



STEP 1

Lay the floor into position, the wide straight edge is the front.



STEP 2

Using the handle, place the base unit on the back of the floor with the hollow side facing down.



STEP 3

Locate your three fan units, picking them up with the handles located on the back, place the first fan unit onto the base, lining it up with the grooves – make sure it is securely in place with no movement.



Stack the next fan unit on top of the first one. And the third fan unit on top of the second one so you have a total of three fan units on top of the base. Ensure the red filter release buttons are on the right hand side when looking at the front of the station.



STEP 4

Locate the metal bars and base seals to align them with the holes on the top of the base station, ensuring the seals with washers are positioned between the base and bars with the washers on top. Loosely screw the metal bars to the base unit and the fans using the screws provided, allowing room to insert the sides and only tighten after the sides are in place.

TOWER ASSEMBLY



STEP 5

Locate the aluminium sides and peel off the protective film. Insert the aluminium sides in between the fan units and the loosely screwed-on metal support bars. Once the side panels are inserted, starting from the top, tighten the screws to clamp the side panels tightly into position. *(Note: these are reversible for two colour options)*

STEP 6

Attach the spray applicator holder. Gently slide the inner rubber out, ensuring it stays attached to the plastic at all times. Turn the cup upside down, with the opening of the rubber facing towards the edge. Fit the rubber onto the edge of the side panel, as far as it can go. While holding the rubber in place, swing the cup upwards on its hinge and slide over the rubber.



STEP 7

Locate the foot pedal and power cord. Connect the power cord to the shorter cord coming out of the foot pedal. Connect one of the longer cords from the foot pedal into the base of the station, this is your spray machine. Connect the other longer cord from the foot pedal into the bottom fan unit of the tower. Find one of the connector cords and insert the metal male end into the bottom fan unit, and the female end into the middle fan unit. Find the second connector cord and insert the metal male end into the middle fan unit, and the female end into the top fan unit. Plug the power cord coming out of the foot pedal into the wall socket.



TOWER ASSEMBLY



STEP 8

Attach the hose to the Rapid spray unit by pulling the connection back exposing the prongs and ensuring the “U” groove is facing up. Line up the prongs to meet the unit, push the connection in to cover the fitting and screw in clockwise until firmly in place and sitting straight.



STEP 9

Connect the hose to the applicator by aligning the “D” fitting with the flat edge towards the back. Push the fitting into the applicator and screw clockwise until firm without over tightening.




STEP 10

Place the applicator in the cup holder.


Turn each fan unit ON and turn the spray unit/base ON.

RAPID APPLICATOR FUNCTIONS


The Rapid applicator has adaptable spray patterns:

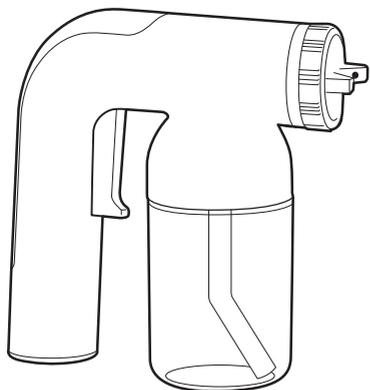


Horizonatal

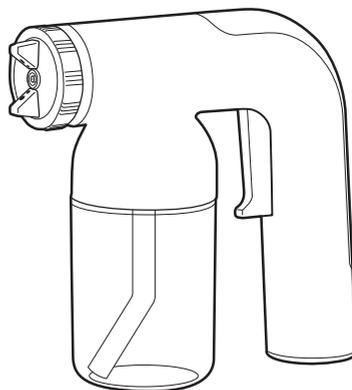

Vertical

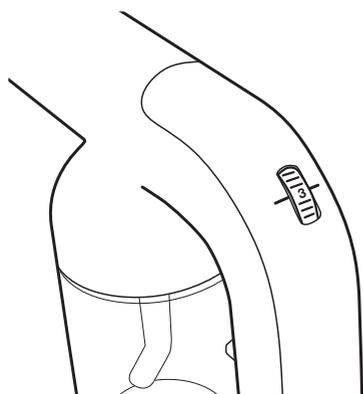


The most common setting is 2 or 3.

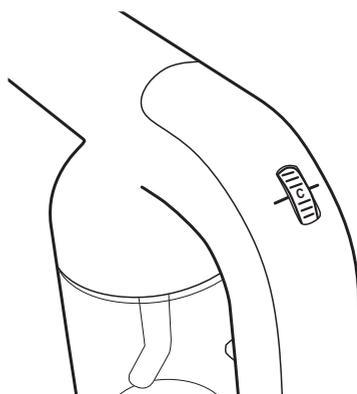

The "C" setting is designed for cleaning your applicator.

SECONDARY SPRAY APPLICATOR MAINTENANCE

Secondary maintenance must be run on the applicator every 2-4 weeks or when required. Secondary maintenance will deliver a more thorough clean to prevent or clear any blockages and uphold the applicators performance.

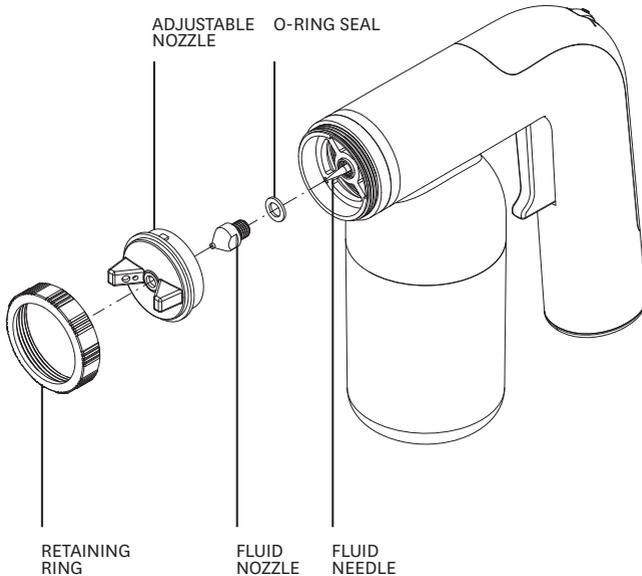

TROUBLESHOOTING - BLOCKED NOZZLE OR CONTINUOUS SPRAY WITHOUT PRESSING THE TRIGGER

- STEP 1 - Locate and unscrew retaining ring. To release; turn retaining ring in an anti-clockwise motion.
- STEP 2 - Gently pull on the adjustable nozzle to remove.
- STEP 3 - Fit an 8mm spanner to the flat edges of the fluid nozzle and turn anti-clockwise to unscrew.
- STEP 5 - Ensure you do not misplace the o-ring seal, which is located behind the fluid nozzle.
- STEP 6 - Once removed, visually inspect the fluid nozzle for small particles or blockages - rinse thoroughly with hot water.
- STEP 7 - Gently wipe the fluid needle to clean and remove any debris. (the fluid needle should not be removed from the applicator at any time)
- STEP 8 - Once visually clear of any debris, re-attach fluid nozzle, ensuring the O-ring is in position, then use the spanner (8mm) to gently tighten back into place.
- STEP 9 - Replace adjustable nozzle and rotate back into position.
- STEP 10 - Repeat previous step, this time with the retaining ring.

SPRAY STATION TROUBLESHOOTING AND MAINTENANCE

If you are experiencing problems with this unit, in the first instance please carefully read the relevant sections of the User Manual and the Troubleshooting section below. If you cannot solve your problem please contact your supplier for further assistance.

PROBLEM	CAUSE	WHAT TO DO
Your unit isn't extracting at full capacity.	Unit isn't working correctly.	Feel for air from the back of each unit.
	The unit is not turned on.	Check each fan unit switch is on and illuminated blue and make sure all cords are inserted correctly.
	The filter needs to be changed.	Replace the filter.
The blue light on the power switch does not turn on.	Electricity not turned on.	Check the power cord is plugged in correctly.
	The fuse needs to be replaced.	Change the fuse. This is located on the side of each fan unit where the power switch is, above the metal pronged male plug.
The foot pedal does not work.		Check each tan unit switch is on and illuminated blue, and make sure all cords are inserted correctly.
	Electricity is not turned on.	Check the power is turned on at the power outlet.
There is a build up of solution around the fan units.	The fan units need to be cleaned.	Clean the unit using warm soapy water. Approximately once a month unstack the fan units and clean in between with warm soapy water.
	The filter needs to be changed.	Replace the filter.

CHANGING THE EXTRACTION FILTERS

The filters are disposable and replacement filters are ordered in a 2 pack (so you will require 2 packs for this unit). It is recommended that filters be changed after **100+ sprays**.




STEP 1

Press the red button on the side of the system and swing open the front of the unit.



STEP 2

Remove the filter, discard and replace with a new filter with the metal grid facing forward.

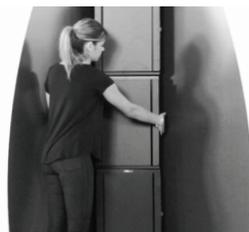

STEP 3

Close the unit back up by pressing the red button and pushing the front of the unit in place until it locks.

CHANGING THE FUSE



STEP 1

Use a flat edge screwdriver to open the fuse compartment.

STEP 2

Remove the old fuse and replace with a new one.

RAPID TROUBLESHOOTING

If you are experiencing problems with this unit, in the first instance please carefully read the relevant sections of the User Manual and the Troubleshooting section below. If you cannot solve your problem please contact your supplier for further assistance.

PROBLEM	CAUSE	WHAT TO DO
My solution is bubbling from the cup	Seal is not in properly	Fit the gun seal correctly.
	Solution Cup is not screwed in correctly	Unscrew and reattach the cup.
	The cup is cross-threaded	Unscrew and reattach the cup.
	Solution cup is overfilled	Empty some solution from the cup so it is half to 3/4 full.
The air flow is cutting in an out	The filter is dirty	Remove the filter from the base of the unit and rinse in warm water. Wait until filter is completely dry before refitting.
	The power setting need adjusting	Increase the power on your system.
The Spray Unit will not turn on	Power cord not attached	Ensure that the power cord is pushed in firmly to the base of the unit and wall socket
	Electricity not turned on	Ensure that the power point is on
The spray applicator is leaking	Spray Cup is not tight enough	Tighten the solution cup
	Too much solution	Empty some solution from the cup so it is half to 3/4 full
	Nozzle may be blocked	Perform secondary maintenance
My hose won't screw into the unit.	Prongs & groove are not aligning properly	Pull connection back exposing the prongs. Ensuring the groove is facing the top, line up the prongs to meet the unit. Release the connection & screw in clockwise.

RAPID TROUBLESHOOTING

PROBLEM	CAUSE	WHAT TO DO
There is a 'C' showing in place of the number setting on the display face.	Your filter needs to be cleaned	Remove the filter from the base of the unit and rinse in warm water. Wait until filter is completely dry before re-fitting. To clear the setting hold down the heat button and the display will return to normal.
There is a 'E' showing in place of the number setting on the display face.	Overheated or electrical malfunction	This will go down once the machine has cooled down This will not disappear if the machine is no longer able to function.
The spray is spluttering	Solution in cup low	Add solution to the cup
	Control dial is set too low	Increase power
	Nozzle may be blocked	Perform secondary maintenance
	Air pressure is low	Increase air pressure Clean filter in machine
No solution is coming out of the spray applicator	Nozzle may be blocked	Spray warm water through the applicator
	Solution in cup too low	Add solution to the cup
	Trigger is jamming	Spray warm water through the applicator while the Solution Dial is set at C and pull the trigger repeatedly until it frees
	Solution Dial on applicator set too low	Increase solution dial on applicator, number 1 being the lowest and Number 6 being the highest setting

RAPID TIPS & TRICKS

PROBLEM	CAUSE	WHAT TO DO
The solution is sitting on the skin or beading on the client	Too much tanning solution has been sprayed onto the skin	Dab area gently with a clean dry towel and re-spray lightly, blending the tan in
	Client has not prepared their skin correctly i.e. moisturiser or perfume on the skin	
	Client maybe excessively hot and perspiring	
	If machine air pressure is set to low it will not atomise the solution	Increase the air speed.
	Client may have used a body wash or scrub high in oil.	The client needs to remove the product from the skin.
The client has tanning solution in areas they don't wish to tan	The technician has sprayed the area incorrectly	Exfoliate the area using tan removing product for best results or a cloth and soap
	Client has touched part of their body with a spray tanned area	
The client appears orange	Too much tanning solution has been sprayed onto the skin	Exfoliate the skin before re-spraying and ensure the spray application is lighter
	The client may have left a rapid tanning solution on too long	
	The client may have low tolerance to DHA	

RAPID TIPS & TRICKS

PROBLEM	CAUSE	WHAT TO DO
<p>The spray tan has not developed as dark as desired</p>	<p>The spray tan solution used may be old or heat affected reducing the reaction in the skin. Sometimes a green hue will appear to indicate this</p>	<p>Be sure to keep the solution in a cool dry place and ensure the solution is fresh</p>
	<p>A different solution was sprayed or the spray application dial was set lighter</p>	<p>Ensure the client has followed the correct recommendations for preparation and post spray tan care</p>
	<p>The client may have showered or perspired before the tan could develop</p>	<p>The client can be resprayed if required after their minimum 8 hours and after a shower has been taken</p>
	<p>Client may have showered too early</p>	
	<p>Other factors may affect the tan's development, including diet, hormones and medication. Please refer to the client</p>	
	<p>Client may have used soap or body wash preventing DHA from developing on the skin.</p>	

WARRANTY INFORMATION

IMPORTANT

Please keep your proof of Purchase and User Manual in a safe place as you will require these to make a warranty claim. Prior to making a claim you should read through the trouble shooting section in the manual and contact your supplier. All warranty claims should be made directly with your supplier.

If within one (1) year from the date of purchase, the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit which may be new or refurbished. This warranty applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost.

Warranties shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under these warranties:

- a) to repair damage resulting from attempts by personnel other than authorised representatives to install, repair or service the product;
- b) to repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution;
- c) to perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed;
- d) to repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications,

To activate your warranty, please complete the information and post to Tanning Essentials within 14 days of purchase.

WARRANTY RETURN FORM

Please include this form when returning warranty items.

Customer Information:

DATE:

CUSTOMER NAME:

BUSINESS NAME:

CONTACT NUMBER:

E MAIL:

ADDRESS :

(PO Box Not Accepted)

I give my authority for goods to be left at the postal address mentioned above: Please circle YES / NO
Please Note: If circled Yes, no liability will be taken

Product Information:

PRODUCT NAME:

PURCHASE DATE:

SUPPLIER INVOICE No*:

* All warranty claims must include proof of purchase. This must be a photocopy of the original invoice.

Reason for Return:

SAFETY INFORMATION

The Tanning Essentials Turbo Twister Spray Station is designed and built to the highest standards. This system must not be operated by children, sprayed using only professional spray tan solution, kept away from water and be connected to the correct power supply at all time.

Please note the details of your model here:

MODEL:

SERIAL NUMBER:

DATE OF PURCHASE:

SUPPLIER NAME:



The Tanning Essentials Rapid Spray Tanning System is made in China



WARRANTY CARD

MODEL TYPE:

SERIAL NUMBER:

SUPPLIER NAME:

DATE OF PURCHASE:

NAME:

ADDRESS:

SUBURB:

POST CODE:

STATE:

COUNTRY:

EMAIL:

PHONE:

BUSINESS TYPE

BEAUTY

TANNING

HAIR

MOBILE

HOME

To submit your warranty online, please visit www.tanningessentials.co and select the warranty link. Please include proof of purchase.

OUR DETAILS

ADDRESS:

10 Apex Court, Thomastown, VIC. 3074 Australia

PHONE:

1300 877 677 (within Australia)

INTERNATIONAL PHONE:

+613 9463 8900

EMAIL:

sales@tanningessentials.co

WEB:

www.tanningessentials.co



www.facebook.com/tanningessentials



www.youtube.com/user/TanningEssentials

AUSTRALIA | CHINA | UNITED KINGDOM | USA

www.tanningessentials.co



AFFIX
POSTAGE
STAMP
HERE

Tanning Essentials

10 Apex Court,
Thomastown, VIC. 3074
Australia