

TANNING
essentials® SIMPLE TANNING SYSTEMS *built purposely for a perfect spray tan.*

PORTABLE TURBO TWISTER - TRAINING MANUAL

portable turbo twister

 


QUICK SET UP GUIDE




The Tanning Essentials Turbo Twister Mobile contains:

- 1 1 x Fan Unit
- 2 1 x Instruction Manual
- 3 1 x Power Cord

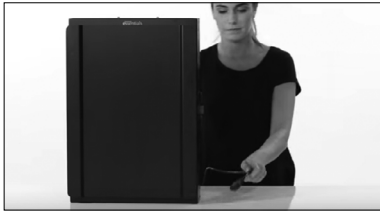

STEP 1

 Unpack the system from packaging.

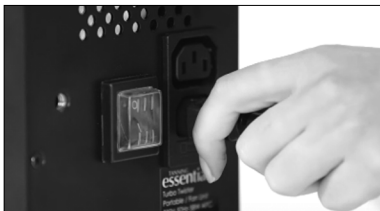

STEP 2

To begin, locate the power cord and plug it into the side of the unit.



STEP 3

Turn on the unit by pressing the blue ON/OFF switch located on the side of the machine.

IMPORTANT

For optimal results, combine the Portable Turbo Twister with an enclosure, positioning the unit on the floor behind the client.

CHANGING THE EXTRACTION FILTER

The filters are disposable and replacement filters are ordered in a 2 pack. It is recommended that filters be changed after **100+ sprays**.



 
STEP 1

Press the red button on the side of the unit and swing open the front of the unit.



STEP 2

Remove the filter, discard and replace with a new filter with the metal grid facing forward.

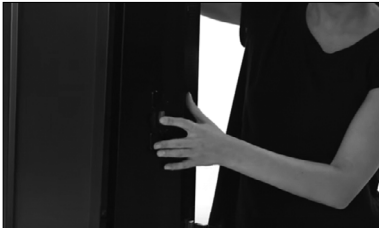

STEP 3

Close the unit back up by pressing the red button and pushing the front of the unit in place until it locks.

CHANGING THE FUSE



STEP 1

Use a flat edge screwdriver to open the fuse compartment.

STEP 2

Remove the old fuse and replace with a new one.

TROUBLESHOOTING AND MAINTENANCE

If you are experiencing problems with this unit, in the first instance please carefully read the relevant sections of the User Manual and the Troubleshooting section below. If you cannot solve your problem please contact your supplier for further assistance.

PROBLEM	CAUSE	WHAT TO DO
Your unit isn't extracting at full capacity.	Unit isn't working correctly.	Test your unit is working correctly by feeling for air at the back.
	The unit is not turned on.	Check each fan unit switch is on and illuminated blue and ensure all cords are inserted correctly.
	The filter needs to be changed.	Replace the filter.
The blue light on the power switch does not turn on.	Electricity not turned on.	Check the power cord is plugged in correctly.
	The fuse needs to be replaced.	Change the fuse. This is located on the side of the unit where the power switch is, above the metal pronged male plug. It is easier to change the fuse if the machine is upside down. Using a small flat screwdriver, insert it into the little straight groove and slide out the fuse holder.
There is a build up of solution around the fan units.	The fan units need to be cleaned.	Clean the unit using warm soapy water. Approximately once a month unstack the fan units and clean in between with warm soapy water.
	The filter needs to be changed.	Replace the filter.

WARRANTY INFORMATION

IMPORTANT

Please keep your proof of Purchase and User Manual in a safe place as you will require these to make a warranty claim. Prior to making a claim you should read through the trouble shooting section in the manual and contact your supplier. All warranty claims should be made directly to your supplier.

If within one (1) year from the date of purchase, the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit which may be new or refurbished. This warranty applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost.

Warranties shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under these warranties:

- a) to repair damage resulting from attempts by personnel other than authorised representatives to install, repair or service the product;
- b) to repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution;
- c) to perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed;
- d) to repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications.

WARRANTY RETURN FORM

To activate your warranty, please complete the information and post to Tanning Essentials within 14 days of purchase.

Customer Information:

DATE:

CUSTOMER NAME:

BUSINESS NAME:

CONTACT NUMBER:

EMAIL:

ADDRESS:
(PO Box Not Accepted)

I give my authority for goods to be left at the postal address mentioned above: Please circle YES / NO
Please Note: If circled Yes, no liability will be taken

Product Information:

PRODUCT NAME:

PURCHASE DATE:

SUPPLIER INVOICE No*:

* All warranty claims must include proof of purchase. This must be a photocopy of the original invoice.

Reason for Return:

SAFETY INFORMATION

The Tanning Essentials Portable Turbo Twister is designed and built to the highest standards.

Please note the details of your model here:

MODEL NAME:

SERIAL NUMBER:

DATE OF PURCHASE:

SUPPLIER NAME:



The Tanning Essentials Turbo Twister is made in China



WARRANTY CARD

MODEL TYPE:

MODEL TYPE:

SUPPLIER NAME:

SUPPLIER NAME:

NAME:

ADDRESS:

SUBURB:

POST CODE:

STATE:

COUNTRY:

EMAIL:

PHONE:

BUSINESS TYPE:

BEAUTY

TANNING

HAIR

MOBILE

HOME

To submit your warranty online, please visit www.tanningessentials.co and select the warranty link. Please include proof of purchase.

OUR DETAILS

ADDRESS:

15 Production Drive, Campbellfield, VIC. 3061 Australia

PHONE:

1300 877 677 (within Australia)

INTERNATIONAL PHONE:

+613 9463 8900

EMAIL:

sales@tanningessentials.co

WEB:

www.tanningessentials.co



www.facebook.com/tanningessentials

View our full video on the Portable Turbo Twister
Set Up, Maintenance and Troubleshooting

www. **You Tube** .com/user/TanningEssentials

AUSTRALIA | CHINA | UNITED KINGDOM | USA

www.tanningessentials.co



AFFIX
POSTAGE
STAMP
HERE

Tanning Essentials

15 Production Drive
Campbellfield, VIC. 3061
Australia